










 







 











 

 
 





 




 

 

 


 

 

















	Original	Rechange	Original	Rechange
	 Power	 Power	 Tape <>	 Green
	 1	 1	 Tuner/Band	 Yellow
	 2	 2	 Play CD	 Play
	 3	 3	 Pause CD	 Pause
	 4	 4	 Reverse Mode	 Media
	 5	 5	 I<<	 I<<
	 6	 6	 Stop	 Stop
	 7	 7	 >>I	 >>I
	 8	 8	 Beat Cut	 Back
	 9	 9	 Program	 Shift + Sleep
	 10	 0	 Random	 TV/R
	 +10	 Guide	 Repeat	 Text
	 Auto Preset	 Menu	 Treble+	 Ch +
	 Sleep	 Sleep	 Treble-	 Ch -
	 Display	 Info	 Bass+	 Right
	 Stereo Auto/Mono	 Dual	 Bass-	 Left
	 AUX	 Red	 Vol+	 Vol +



