



Original	Recharge
Power	Power
Input D/A	Shift + AV / Input / RDS
Tv/Radio	TV/Radio /
Text	Text / Goto
Input Source	AV / Input / RDS
Bright+	Shift + Up
Bright-	Shift + Down
Ratio	Picture / Format
I/II	Audio / Lang I/II
Simplink	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Recharge
Rec	Rec / Rec Mode
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>	>>  / Preset+
Exit	Exit / Cancel / Clear
Back	Back / Return
Menu	Menu / Home
Info	Info / Angle
Guide	Guide / EPG / -/-
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-



 

 











 







 

 







 







 

 







Original	Rechange
Mute	Mute / Dimmer
PR+	CH+ / Page+
PR-	CH- / Page-
FAV	Fav / Marker / PC
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
List	Smart / List
Q.View	D.Menu / Top
Update	Setup / OPT /

Original	Rechange
Index	Zoom / Size
Time	Shift + Sleep / Timer
Sleep	Sleep / Timer
Hold	Shift + Stop /
Reveal	Sound / Title
Subtitle	Subtitle / EQ





Original		Recharge		Original		Recharge	
	Power		Power		4		4
	Stop		Stop / Hold		5		5
	Play		Play / Slow		6		6
	Pause		Pause / Step / Freeze		7		7
	<<		<< / Tune-		8		8
	I<<		I<< / Preset-		9		9
	>>		>> / Tune+		0		0
	>>I		>>I / Preset+				
	Menu		Menu / Home				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		OK				
	1		1				
	2		2				
	3		3				





Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Input Source		AV / Input / RDS		9		9
	Stop		Stop / Hold		0		0
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	<<		<< / Tune-				
	>>		>> / Tune+				
	PR+		CH+ / Page+				
	PR-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

