 





Original	Recharge
 Power	 Power
 Power Tv	 Shift + Power
 AV	 AV / Input / RDS
 Tv/DVD	 TV/Radio /
 Open/Close	 Eject / Surround
 AV Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR+ Tv	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 PR- Tv	 Shift + CH- /
 7	 7
 8	 8
 9	 9

Original	Recharge
 Vol+ Tv	 Vol+
 Rec	 Rec / Rec Mode
 0	 0
 Mute	 Mute / Dimmer
 Vol- Tv	 Vol-
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 I<< Skip	 I<< / Preset-
 >>I Skip	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 PR+	 CH+ / Page+
 Up	 Up
 Menu/List	 D.Menu / Top
 Left	 Left





Original	Recharge
Enter	OK
Right	Right
Return	Back / Return
PR-	CH- / Page-
Down	Down
Display	Display / Media
O)))/Audio	Audio / Lang I/II
Title	Sound / Title
Marker	Shift + Fav / Marker / PC
Clear	Exit / Cancel / Clear
Red	Red / Netflix / Search
FAV	Fav / Marker / PC
Green	Green / APP / Repeat
Repeat	Shift + Green / APP /
Yellow	Yellow / YouTube / Repeat
Subtitle	Subtitle / EQ
Blue	Blue / Prime Video / Random

Original	Recharge
Text	Text / Goto
EPG	Guide / EPG / -/-

