

 
 


 
 






 
 
 
 


 



 






 




 
 
 

 
 
 
 

 


 
 
 
 

 
 



 



 
 








Original		Rechange		Original		Rechange	
	Standby		Power		Audio		Dual
	Mute		Mute		Subtitle		Subt
	1		1		CH.List		List
	2		2		FAV		Pre Ch
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Ok		Ok
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Exit/Cancel		Exit
	Display		Info		S.Mode		Shift + Dual
	Recall		Back		P.Mode		Format
	Setup		Menu		CH+/Page+		Ch +
	EPG		Guide		CH-/Page-		Ch -
	Source		AV		Red/Goto		Red





Original	Recharge
A-B Green/A-B	B Green
REPEAT Yellow/Repeat	C Yellow
ANGLE Blue/Angle	D Blue
Record Record	REC MODE Rec
Rec.List Rec. List	HOME SMART Smart
TV/Radio TV/Radio	SEARCH TV/R TV/R
Scaler Scaler	ECO 3D 3D
Play Play	PLAY MODE Play
Pause/Reveal Pause/Reveal	Pause Pause
Stop/Index Stop/Index	Stop Stop
Mix Mix	Mix Mix
<</Mix <</Mix	<< <<
>> >>	>> >>
>> >>	>> >>
Text Text	REPEAT TEXT Text
DVD-Menu S. Page /	E-MANUAL D.MENU D. Menu
Title Hold/Title	APP MEDIA Media

Original	Recharge
Zoom+ Size Zoom+/Size	SHIFT + CH Shift + Ch +
Zoom- Zoom-	SHIFT + CH Shift + Ch -
Eject Eject	ZOOM Eject
Sleep Sleep	PROG SLEEP Sleep

