




 

 



 



 

 

 
 
 

 
 





 







Original	Rechange
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TXT/MIX/Text	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Rechange
 P+	 Ch +
 P-	 Ch -
 CH List	 List
 Menu	 Menu
 Smart Hub	 Smart
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Back/Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Ok	 Ok
 Red	 Red
 Green	 Green





Original		Rechange		Original		Rechange	
	Yellow		Yellow				
	Blue		Blue				
	Rec		Rec				
	E-Manual		D. Menu				
	D		Media				
	Stop		Stop				
	<</ <<		<<				
	Play		Play				
	Pause		Pause				
	>>/>>		>>				

