






 









 







 

 





 





 



 



 



 





















Original		Rechange		Original		Rechange	
	POWER		Power		VOL+		Vol +
	Open / Close		Eject		VOL-		Vol -
	MUTE		Mute		SETUP		Options
	DVD / TV Sys		Smart		PAUSE / Step		Pause
	VIDEO		Media		Menu/Return		Menu
	TUNER		Shift + Media		Menu / Return		Back
	I<<		I<<		GOTO / Auto		Guide
	<<		<<		PROGRESSIVE		AV
	>>		>>		1		1
	>>I		>>I		2		2
	Up		Up		3		3
	Down		Down		4		4
	Right		Right		5		5
	Left		Left		6		6
	Enter		Ok		7		7
	Play		Play		8		8
	STOP		Stop		9		9



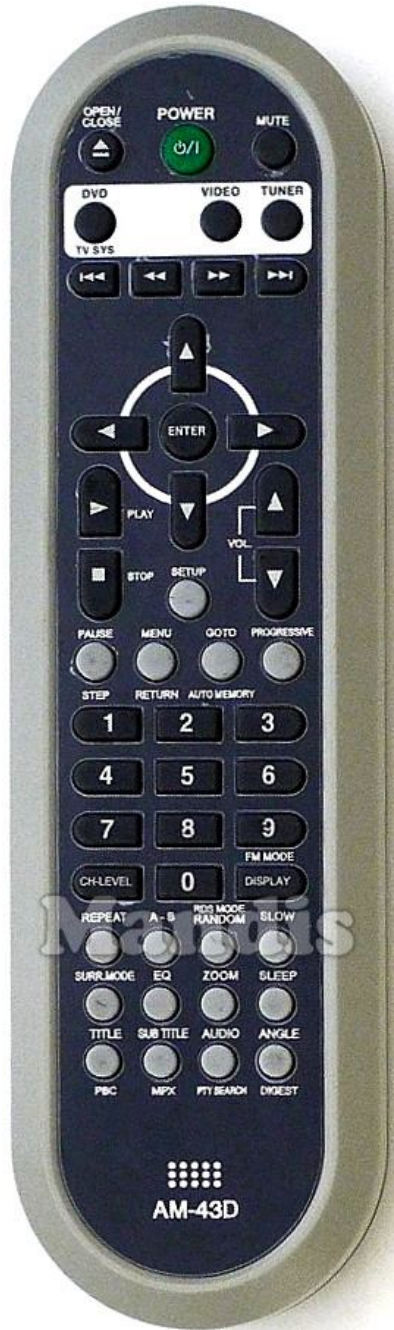

Original	Recharge	Original	Recharge
0	0	0	0
CH-LEVEL	CH-LEVEL	SEARCH TV/R	TV/R
FM MODE DISPLAY	Display / FM Mode	DISPLAY INFO	Info
REPEAT	REPEAT	REPEAT TEXT	Text
A-B	A-B	SHIFT + PLAY MODE	Shift + Play
RDS MODE RANDOM	RANDOM / RDS	DISC NAV LIST	List
SLOW	SLOW	CH -	Ch -
SURR. MODE	SURR. MODE	ECO 3D	3D
EQ	EQ	SOUND DUAL	Dual
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
SLEEP	SLEEP	PROG SLEEP	Sleep
TITLE PBC	Title / PBC	E-MANUAL D.MENU	D. Menu
SUB TITLE/MPX	SUB TITLE/MPX	AD SUBT	Subt
AUDIO / PTY	AUDIO / PTY	SHIFT + SOUND DUAL	Shift + Dual
ANGLE	ANGLE	PICTURE FORMAT	Format

Original	Recharge	Original	Recharge

