




 

 



 
 
 
 
 
 
 


 





 
 




	Original	Rechange	Original	Rechange
	Power			Ch +
	ShowView			Ch -
	Rec Check			Vol +
	Ext Link			Vol -
	Rec			I<<
	1			I>>
	2			<<
	3			>>
	4			Stop
	5			Pause
	6			Play
	7			Options
	8			Menu
	9			Info
	0			Exit
	-/--			Up
	AV/Input Select			Down



 


 


 

 






 



 

 

 

 


 

 
 








 



 













 
 

 








Original		Rechange		Original	Rechange
	Right		Right		
	Left		Left		
	Enter		Ok		
	Prog/Check		Sleep		
	Timer		Shift + AV		
	Output		TV/R		
	AV Link		Media		
	Audio		Dual		
	Tv Aspect/Off		Format		
	Music w/Picture		List		
	A/Cancel Reset		Red		
	B/I-Timer		Green		
	C/SP/LP/EP		Yellow		
	D/VPS/PDC		Blue		





	Original	Rechange
	Power	 Power
	Rec Check	 3D
	Ext Link	 Media
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	>10	 Guide
	AV/Input Select	 AV
	Tracking/V-Lock/C	 Ch +
	Tracking/V-Lock/C	 Ch -

	Original	Rechange
	Vol+	 Vol +
	Vol-	 Vol -
	I<< Skip	 I<<
	Skip >>I	 >>I
	<< Slow/Search	 <<
	Slow/Search >>	 >>
	Stop	 Stop
	Pause/Step	 Pause
	Play	 Play
	Top Menu/Direct Navigator	 Menu
	Play List	 List
	Display	 Info
	Return	 Back
	Up	 Up
	Down	 Down
	Right	 Right
	Left	 Left





Original		Rechange		Original	Rechange
	Enter		Ok		
	Timer		Shift + AV		
	Quick Replay		D. Menu		
	Output		TV/R		
	Subtitle		Subt		
	Audio		Dual		
	Angle/Page		Smart		
	Music w/Picture		Pre Ch		
	Play Mode		Shift + Play		
	Zoom		Eject		
	Repeat		Text		
	Position		Options		
	A/Cancel Reset		Red		
	B/Cinema		Green		
	C/Group		Yellow		
	D/Setup		Blue		





	Original	Rechange
	Power	Power
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	-/--	GUIDE
	AV/Input Select	AV
	CH+	Ch +
	CH-	Ch -
	Vol+	Vol +
	Vol-	Vol -

	Original	Rechange
	Tv Aspect	FORMAT
	A	Red
	B	Green
	C	Yellow
	D	Blue

