 

 



 
 
 
 
 

 

 

 

 
 
 

 
 
 
 
 


 
 

 

 
 
 




 
 
 
 
 




 
 


 
 


 
 
 
 


 







Original	Rechange
 Power	 Power
 Open Close	 Eject
 Function [→]	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 3D Sound	 3D
 I<<<	 I<<<
 <<<	 <<<

Original	Rechange
 >>>	 >>>
 >>I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Speaker Level	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 Optical	 Options
 Sound Effect	 Shift + Dual
 Mute	 Mute
 Home	 Smart
 Info/Menu	 Info
 Repeat	 Text
 Up/Preset+	 Up
 Down/Preset-	 Down
 Left/Tunin-	 Left



