

 







 
 


 
 







 
 


 




 















	Original	Rechange	Original	Rechange
	Power			5/Scan
	Stop			6/Repeat
	Pause			7
	Play			8
	I<< Track/Search			9
	Track/Search >>I			0
	Menu			Aspect
	Return			Game
	Up			DVD Menu
	Down			OSD/Track
	Right			Title/Title Chapter
	Left			
	Enter			
	1/Subtitle			
	2/Audio			
	3/Angle			
	4/Random	