



Original	Rechange
 Standby	 Power
 Input Up	 Ch +
 Input Down	 Ch -
 Timer	 AV
 Up	 Up
 Down	 Down
 Enter	 Ok
 Random CD	 Options
 Stop CD	 Stop
 Pause CD	 Pause
 Play CD	 Play
 Memory CD	 Rec
 Repeat CD	 Text
 I<< CD	 I<<
 >>I CD	 >>I
 Scroll MD	 Subt
 Stop MD	 Blue

Original	Rechange
 Pause MD	 Yellow
 Play MD	 Green
 Play Mode MD	 Dual
 Repeat MD	 Shift + Text
 I<< MD	 I<<
 >>I MD	 >>
 Sleep	 Sleep
 A.Presence	 Info
 Clock Call	 Media
 Volume Up	 Vol +
 Volume Down	 Vol -
 Muting	 Mute
 Stop CDR	 1
 Pause CDR	 2
 Play CDR	 3
 Play Mode CDR	 7
 Repeat CDR	 4





Original		Rechange	
	I<< CDR		5
	>>I CDR		6
	< Tape		Guide
	Stop Tape		0
	Tape >		Pre Ch
	<< Tape		8
	>> Tape		9
	Tuner Preset Up		Right
	Tuner Preset		Left

Original		Rechange	

