


 
 


 
 


 
 
 

 
 

 
 
 
 


 
 


 
 

 
 

 

 


 







 

 

 

 

 






 




 






 
 
 
 

 

 

 





 







Original		Rechange		Original		Rechange	
	Standby		Power		8		8
	Open / Close		Eject		9		9
	OSD		Blue		0		0
	Subtitle		Subt		10+		Guide
	Angle		Yellow		Goto		Pre Ch
	Language		Dual		Step		Ch +
	L / R		Red		Slow		Ch -
	N / P		Green		PBC		Media
	Video Mode		Format		Repeat		Text
	Video		AV		Program		Sleep
	1		1		A-B		Shift + Dual
	2		2		Vol +		Vol +
	3		3		Vol -		Vol -
	4		4		Setup		Options
	5		5		Setup		Menu
	6		6		Zoom		Shift + Eject
	7		7		Up		Up





Original	Rechange	Original	Rechange
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Title	 TV/R		
 Root	 Info		
 Return	 Back		
 Return	 Exit		
 3D	 3D		
 Mute	 Mute		
 Pause	 Pause		
 Play	 Play		
 Stop	 Stop		
 << FR	 <<		
 >> FF	 >>		
 I<< Prev	 I<<		
 >>I Next	 >>I		

