

 


 
 


 

 





| | Original | Rechange | Original | Rechange |
|---|-----------------------|---|---|----------|
|  | Power |  |  | Pause |
|  | Sleep |  |  | Stop |
|  | Display |  |  | Clear |
|  | Clock/Timer |  |  | EQ |
|  | Clock/Timer Set |  |  | Folder+ |
|  | Tuner Memory |  |  | Folder- |
|  | Play Mode/Tuning Mode |  |  | Vol+ |
|  | Repeat FM |  |  | Vol- |
|  | USB |  |  | Enter |
|  | CD |  | | |
|  | Band/Tuner |  | | |
|  | Function |  | | |
|  | I<</- |  | | |
|  | >>I/+ |  | | |
|  | <</+ |  | | |
|  | >>/- |  | | |
|  | Play |  | | |

