

 


 
 
 
 
 
 





 
 


 




 
 
 

 
 



 

 

 








 
 

 


 


 
 
 


 

 


 
 






Original	Rechange
 Power	 Power
 Input	 AV
 Digital/Analog	 3D
 TV/Radio	 TV/R
 Exit	 Exit
 EXT.Box Menu	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]/[?]	 INFO

Original	Rechange
 [≡]	 Text
 Google Play	 Shift + Smart
 Netflix	 Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Action Menu	 Menu
 APPS	 Shift + Media
 Back	 Back
 TV	 Options
 Home	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





	Original	Recharge	Original	Recharge
	OK	 Ok	 Help	 Format
	Vol+	 Vol +	 Title List	 List
	Vol-	 Vol -		
	Mute	 Mute		
	Recall	 Pre Ch		
	Prog+	 Ch +		
	Prog-	 Ch -		
	Audio	 Dual		
	<<	 <<		
	Play	 Play		
	>>	 >>		
	I<<	 I<<		
	Pause	 Pause		
	>>I	 >>I		
	Rec	 Rec		
	Stop	 Stop		
	[...]	 Subt		

