



 



 



 

 

 



 

 



















 



 

 







 















Original	Rechange
 Power	 Power
 Home	 Shift + Menu /
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 Subtl	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV/Radio	 TV/Radio /
 0	 0
 Recall	 Back / Return

Original	Rechange
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mano/Mouse	 Smart / List
 P-	 CH- / Page-
 Info	 Info / Angle
 Up	 Up
 Entrada	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Salir	 Exit / Cancel / Clear
 Imagen	 Picture / Format
 Sonido	 Sound / Title





	Original	Recharge		Original	Recharge
	Tamaño	ZOOM	Zoom / Size		
	Guía	GUIDE EPG	Guide / EPG / -/--		
	Play	SLOW	Play / Slow		
	Pause/TS	STEP-FREEZE	Pause / Step / Freeze		
	Detener	HOLD	Stop / Hold		
	Grabar	REC MODE	Rec / Rec Mode		
	TXT	GOTO TEXT	Text / Goto		
	I<<	PRESET-	I<< / Preset-		
	Red	NETFLIX SEARCH	Red / Netflix / Search		
	>>I	PRESET+	>>I / Preset+		
	Green	APP REPEAT	Green / APP / Repeat		
	<<	TUNE-	<< / Tune-		
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat		
	>>	TUNE+	>> / Tune+		
	Blue	Prime Video RANDOM	Blue / Prime Video / Random		

	Original	Recharge		Original	Recharge

