



| Original      | Recharge      |
|---------------|---------------|
| Power         | Power         |
| Tv Channel-   | Ch -          |
| Tv Channel+   | Ch +          |
| Power Tv      | Shift + Power |
| Tv Vol-       | Shift + Vol - |
| Tv Vol+       | Shift + Vol + |
| Tv Mute       | Shift + Mute  |
| Tv Input      | AV            |
| Open / Close  | Eject         |
| Band          | Red           |
| DVD / Karaoke | Green         |
| Aux           | Yellow        |
| USB           | Blue          |
| VSM / Virtual | Format        |
| 1             | 1             |
| 2             | 2             |
| 3             | 3             |

| Original          | Recharge     |
|-------------------|--------------|
| 4                 | 4            |
| 5                 | 5            |
| 6                 | 6            |
| 7                 | 7            |
| 8                 | 8            |
| 9                 | 9            |
| 0                 | 0            |
| XTS Pro           | Media        |
| Marker            | TV/R         |
| Search            | Shift + TV/R |
| Audio / Male      | Dual         |
| Sound / Female    | Shift + Dual |
| Subtitle / Shadow | Subt         |
| Return            | Back         |
| Setup             | Options      |
| Display           | Info         |
| Up / Preset +     | Up           |





| Original         | Rechange      |
|------------------|---------------|
| Down / Preset -  | Down          |
| Right / Tun +    | Right         |
| Left / Tun -     | Left          |
| Menu             | Menu          |
| Title            | Smart         |
| << Scan - /      | <<            |
| >> Scan + /      | >>            |
| Play             | Play          |
| I<< / Key Con. b | I<<           |
| >>I / Key Con. # | >>I           |
| Pause / Step     | Pause         |
| Repeat           | Text          |
| Repeat A-B       | Shift + Text  |
| Stop             | Stop          |
| Volume +         | Vol +         |
| Volume -         | Vol -         |
| Prog / Memo.     | Shift + Sleep |

| Original   | Rechange      |
|------------|---------------|
| Clear      | Exit          |
| Zoom       | Shift + Eject |
| Mute       | Mute          |
| Sleep      | Sleep         |
| Dimmer     | 3D            |
| Echo Vol - | Shift + Down  |
| Echo Vol + | Shift + Up    |
| Mic Vol -  | Shift + Left  |
| Mic Vol +  | Shift + Right |
| Enter      | Ok            |

