

 
 





 

 




 
 

 
 
 
 
 

 
 



 

 
 
 
 
 

 
 
 


 

 
 
 
 


 



 



 
 
 









Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Info		Info		Blue/Picture		Blue
	TV		TV/R		Yellow/Sound		Yellow
	AV		AV		White		Media
	R		Smart		Green/Timer		Green
	F1		List		Red/Back		Red
	F2		Dual		P+		Ch +
	F3		Subt		P-		Ch -
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Vol+		Vol +
	7		7		Vol-		Vol -
	8		8		Mute		Mute
	9		9		Pause		Pause



