



Original	Recharge
Standby	Power
Source	AV / Input / RDS
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
P Mode	Picture / Format
S Mode	Sound / Title
Freeze	Pause / Step / Freeze
TXT	Text / Goto
Mix / Fav List	Fav / Marker / PC
Size / Subtitle	Zoom / Size
Cancel / Audio	Shift + Exit / Cancel / Clear
Record	Rec / Rec Mode
<< / Index	<< / Tune-
>> / Hold	>> / Tune+
I<< / Reveal	I<< / Preset-

Original	Recharge
>>I / Subpage	>>I / Preset+
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Left	Left
Enter	OK
Right	Right
Play/Pause / Timeshift	Play / Slow
Play/Pause / Timeshift	Shift + Play /
Down	Down
Stop / EPG	Shift + Stop /
Stop / EPG	Stop / Hold
Vol +	Vol+
Mute	Mute / Dimmer
CH +	CH+ / Page+
Vol -	Vol-
TV / Radio	TV/Radio /





Original	Recharge
CH -	CH / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Display	Display / Media
0	0
Recall	Back / Return

Original	Recharge

