



 


 

 


 
 


 
 
 

 
 





 
 


 
 
 

 
 

 
 
 

 
 



 
 
 
 
 
 
 
 
 

 

 













 
 

 

 
 




Original	Recharge	Original	Recharge
 Power	 Power	 Vol-	 Vol -
 Mute	 Mute	 I<</RDS PTY	 I<<
 Function	 Menu	 >>I	 >>I
 Sound	 Dual	 <<	 <<
 EQ	 Subt	 >>/RDS Display	 >>
 DVD	 Media	 Stop	 Stop
 1/Timer On/Off	 1	 Play	 Play
 2/Timer/Clock	 2	 Pause	 Pause
 3/Sleep	 3	 Repeat	 Text
 4/Disc Menu	 4	 Home	 Smart
 5/Title Menu	 5	 USB Rec	 Rec
 6	 6	 Tools	 Options
 7	 7	 Info	 Info
 8/SYNC	 8	 Return	 Back
 9	 9	 Exit	 Exit
 0	 0	 Up/Tuning Up	 Up
 Vol+	 Vol +	 Down/Tuning	 Down



Down



Original	Recharge	Original	Recharge
 Right/#	 Right		
 Left/b	 Left		
 Enter	 Ok		
 Red/Display	 Red		
 GreenMo/ST	 Green		
 Yellow	 Yellow		
 Blue/Keycon	 Blue		
 Speed/CD Rec	 3D		
 My Karaoke	 TV/R		
 Mic Vol+	 Ch +		
 Mic Vol-	 Ch -		

