 
 

 













 
 

Original	Recharge
 Power	 Power
 Source	 AV
 blank	 TV/R
 [> <]	 Options
 square	 D. Menu
 Red / Rec / Movie	 Red
 Red / Rec / Movie	 Rec
 Green / << /	 Green
 Green / << /	 <<
 Yellow / Stop / Child	 Yellow
 Yellow / Stop / Child	 Stop
 Blue / Play / News	 Blue
 Blue / Play / News	 Play
 >> / Other	 >>
 Guide	 Guide
 Text	 Text
 Up	 Up

Original	Recharge
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu
 V +	 Vol +
 V -	 Vol -
 Mute	 Mute
 P +	 Ch +
 P -	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7







 











 



 


 

 


 
 

 
 
 

 
 


 




 



 
 

 

 
 
 



 


 
 




	Original		Recharge	
	8		8	
	9		9	
	0		0	
	i+		Info	
	P < P / -/-		Pre Ch	
	Smart Sound	 + 	Shift + Media	
	Active Control		Smart	
	Smart Picture		Media	
	[1 2]		3D	
	[< >]		Subt	
	[   ]		Exit	
	small squares		Sleep	
	Timer	 + 	Shift + AV	
	[?]		Back	
	Zoom		Eject	
	I-II		Dual	
	Instant Rec	 + 	Shift + Rec	

	Original		Recharge	
	Format		Format	
	DNR		List	
	Instant Stop	 + 	Shift + Stop	





Original		Recharge		Original		Recharge	
	Power		Power		1		1
	Rec		Rec		2		2
	<<		<<		3		3
	<<		I<<		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	>>		>>		7		7
	>>		>>I		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		i+		Info
	Left		Left		P < P / -/--		Pre Ch
	OK		Ok		Timer		AV
	Text		Text		[?]		D. Menu
	Menu		Menu		Zoom		Eject
	P +		Ch +		I / II		Dual
	P -		Ch -				

