 
 
 
 











Original		Rechange		Original		Rechange	
	Power		Power		Timer/Prog.		Sleep
	Input Select		AV		Time Slip		Guide
	Open/Close		Eject		Setup		Options
	1		1		Audio		Dual
	2		2		Clear		Exit
	3		3		Chapter Mark		List
	4		4		Disc Menu		D. Menu
	5		5		Top Menu		Menu
	6		6		Return		Back
	7		7		Display		Info
	8		8		Up		Up
	9		9		Enter		Ok
	0		0		Down		Down
	Prog+		Ch +		Right		Right
	Prog-		Ch -		Left		Left
	Satellite Link		Media		I<< Skip		I<<
	Mode		Smart		Skip >>I		>>I





Original		Rechange		Original		Rechange	
	<<		<<		1.3x/0.8x Play		Green
	>>		>>				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	HDD/DVD Rec		Rec				
	Variable Replay		Format				
	Variable Skip		3D				
	>II/Adjust+		Shift + Right				
	II</Adjust-		Shift + Left				
	DVD		Blue				
	HDD		Yellow				
	AV Select		Red				
	Rec Mode		Shift + Rec				
	Search		TV/R				
	Repeat		Text				
	Dubbing		Subt				

