


 

 

 

 

 

 

 



 



 

 
 
 


 
 

 



 

 

 
 

 

 

 



 



 

 





 





Original		Rechange		Original		Rechange	
	Power		Power		Vol -		Vol-
	TV		Shift + 1		Source		AV / Input / RDS
	1		1		P -		CH- / Page-
	2		2		Guide		Guide / EPG / -/--
	3		3		Menu		Menu / Home
	4		4		W.Link		Shift + Smart / List
	5		5		Tools		Setup / OPT /
	6		6		Up		Up
	7		7		Return		Shift + Back / Return
	8		8		Wheel Left		Shift + Left
	9		9		Left		Left
	- / --		Shift + Guide / EPG / -/--		Enter		OK
	0		0		Wheel Right		Shift + Right
	Pre-CH		Back / Return		Right		Right
	Vol +		Vol+		Info		Info / Angle
	Mute		Mute / Dimmer		Down		Down
	P +		CH+ / Page+		Exit		Exit / Cancel / Clear





Original	Recharge	Original	Recharge
 Red	 Red / Netflix / Search	 Stop	 Stop / Hold
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 TTX / MIX	 Text / Goto		
 Info.L	 Shift + Info / Angle		
 DMA	 D.Menu / Top		
 E.Mode	 Display / Media		
 Content	 Smart / List		
 Subt.	 Subtitle / EQ		
 <<	 << / Tune-		
 <<	 Shift + << / <<		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 >>	 Shift + >> / >>		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		

