


 





















 











Original	Rechange
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Back	 Back
 Nicam / A2	 List

Original	Rechange
 TXT / MIX	 Text
 TXT Cancel	 Exit
 Sys Menu	 Menu
 Picture	 Format
 Audio	 Dual
 Up / CH+	 Up
 Up / CH+	 Ch +
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down / CH-	 Down
 Down / CH-	 Ch -
 Vol-	 Vol -
 Vol+	 Vol +
 TXT Hold	 Stop
 TXT Index	 Info
 TXT Size	 3D



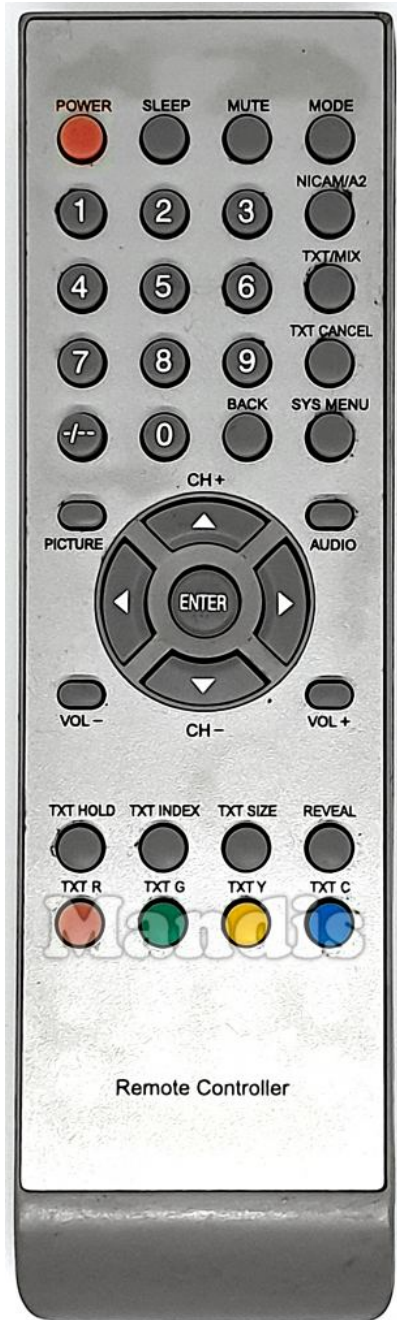

Original		Rechange		Original		Rechange	
REVEAL	Reveal	SEARCH TV/R	TV/R				
TXT R	Red / TXT R	A	Red				
TXT G	Green / TXT G	B	Green				
TXT Y	Yellow / TXT Y	C	Yellow				
TXT C	Cyan / TXT C	D	Blue				

