








 


 





 




Original	Rechange	Original	Rechange
 Mute	 Mute	 Left	 Left
 Power	 Power	 Enter	 Ok
 Subtitle	 Subt	 Stop	 Stop
 Language	 Dual	 L / R	 3D
 Open / Close	 Eject	 1	 1
 Angle	 Format	 2	 2
 Prog	 Sleep	 Goto	 Media
 Title	 List	 3	 3
 Menu	 Menu	 4	 4
 Vol +	 Vol +	 5	 5
 Vol -	 Vol -	 6	 6
 Setup	 Options	 7	 7
 Play / Pause	 Play	 8	 8
 Play / Pause	 Pause	 9	 9
 Up	 Up	 10+	 Guide
 Down	 Down	 0	 0
 Right	 Right	 << Rev	 <<

Original	Rechange	Original	Rechange
 Left	 Left	 Left	 Left
 Enter	 Ok	 Enter	 Ok
 Stop	 Stop	 Stop	 Stop
 L / R	 3D	 L / R	 3D
 1	 1	 1	 1
 2	 2	 2	 2
 Goto	 Media	 Goto	 Media
 3	 3	 3	 3
 4	 4	 4	 4
 5	 5	 5	 5
 6	 6	 6	 6
 7	 7	 7	 7
 8	 8	 8	 8
 9	 9	 9	 9
 10+	 Guide	 10+	 Guide
 0	 0	 0	 0
 << Rev	 <<	 << Rev	 <<





Original	Recharge
 >> Fwd	 >>
 I<< Prev	 I<<
 >>I Next	 >>I
 Display	 Info
 Slow	 +  Shift + Play
 Step	 +  Shift + Pause
 PBC	 Smart
 Zoom	 +  Shift + Eject
 Repeat	 Text
 A - B	 +  Shift + Text
 Video / Mode	 TV/R

Original	Recharge

