 
 
 










Original	Rechange
 Standby	 Power
 P.STD	 Shift + Format
 10+	 Pre Ch
 Open / Close	 Eject
 Scan	 Smart
 Swap	 Back
 Call	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Rechange
 0	 0
 -/--	 Shift + Guide
 Source	 AV
 Nicam	 List
 DTV / DVD	 TV/R
 P +	 Ch +
 P -	 Ch -
 V +	 Vol +
 V -	 Vol -
 Menu	 Menu
 Zoom	 Shift + Eject
 Audio	 Dual
 Stop	 Stop
 Setup	 Options
 Pause / Step	 Pause
 Tune	 Shift + List
 << Rev	 <<





Original	Rechange
>> Fwd	>>
I<< Prev	I<<
>>I Next	>>I
D. Menu	D. Menu
Exit	Exit
EPG / Program	Guide
Up	Up
Down	Down
Right	Right
Left	Left
OK / Play / Enter	Ok
OK / Play / Enter	Play
Subtitle	Subt
FAV / Angle	Shift + Pre Ch
i / Title / PBC	Info
Search	Shift + TV/R
A - B	Shift + Red

Original	Rechange
Slow	Shift + Play
D.Call	Shift + Sleep
Repeat	Shift + Text
Subcode	Shift + Subt
Mix	Media
Text	Text
Hold	Shift + Pause
Reveal	3D
Size	Format
Time	Shift + AV
Mode	Shift + 3D
Red	Red
Green / DTV /	Green
Yellow / Lang	Yellow
Blue / Timer	Blue

