



Original	Rechange
 Power	 Power
 Mute	 Mute
 TV / AV	 AV
 FAV	 Pre Ch
 P.Mode	 Shift + Format
 Status	 Smart
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 -/--	 Shift + Guide
 Exit	 Exit
 TV Menu	 Menu
 OK	 Shift + Ok
 Recall	 Back
 DVB Menu	 D. Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Select	 Ok
 CH -	 Ch -
 CH +	 Ch +
 Vol -	 Vol -
 Vol +	 Vol +
 TV / TXT	 Text
 Zoom / Mix	 Eject





Original		Rechange		Original	Rechange
	Info / Index		Info		
	Subpage		Shift + Subt		
	Cancel		Shift + Exit		
	Reveal		Shift + Smart		
	Hold		Pause		
	Size		Format		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Subtitle		Subt		
	Page -		Shift + Ch -		
	Page +		Shift + Ch +		
	Sleep		Sleep		
	EPG		Guide		
	TV / DVB		Media		
	TV / Radio		TV/R		

