





 


 
 

 

 

 
 
 









 






 

 


 
 

 







 




 

 







Original	Recharge
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV	 TV/R
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Recharge
 Home/@	 Smart
 +P	 Ch +
 -P	 Ch -
 Menu	 Menu
 Q.Menu	 D. Menu
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 WWW	 Media
 Music/Photo/Video	 Options
 Guide	 Guide
 Help	 Info
 */O	 Format





Original	Recharge	Original	Recharge
 [=]	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Lang.	 Dual		
 Sleep	 Sleep		
 [-O-]	 Subt		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

