



Original	Recharge
 Mute	 Mute / Dimmer
 Power	 Power
 Picture	 Picture / Format
 Sound	 Sound / Title
 Multimedia	 Display / Media
 Source	 AV / Input / RDS
 Aspect	 Shift + Picture / Format
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Recall	 Back / Return
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 Menu	 Menu / Home
 Right / Vol +	 Vol+
 Right / Vol +	 Right
 Prev PR	 Fav / Marker / PC
 Down / PR -	 Down

Original	Recharge
 Down / PR -	 CH- / Page-
 OK	 OK
 Red / P.Mode	 Red / Netflix / Search
 Green / P.Still	 Green / APP / Repeat
 Yellow / P.Swap	 Yellow / YouTube / Repeat
 Blue / P.Input	 Blue / Prime Video / Random
 Dynamic Bass	 Smart / List
 3D - Panorama	 TV/Radio /
 P.PR +	 Shift + CH+ /
 Audio I / II	 Audio / Lang I/II
 Still	 Pause / Step / Freeze
 P.PR -	 Shift + CH- /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Recharge	
	6		6
	7		7
	8		8
	9		9
	Lock		Exit / Cancel / Clear
	0		0
	Sleep		Sleep / Timer
	[≡]		Text / Goto
	[≡?]		Eject / Surround
	[≡X]		Subtitle / EQ
	Size		Zoom / Size
	[≡o]		Guide / EPG / -/--
	Hold		Stop / Hold
	[/≡]		Setup / OPT /
	[≡i]		Info / Angle

Original		Recharge	

