


 

 
 


 
 







 




 


 










 



 




 


 


 


 
 
 
 


 



 


 
 


Original	Recharge
Power Receiver	Power
HDMI 1	Shift + 1
HDMI 2	Shift + 2
HDMI 3	Shift + 3
HDMI 4	Shift + 4
[A]	List
V-AUX	AV
AV 1	Shift + 5
AV 2	Shift + 6
AV 3	Shift + 7
AV 4	Shift + 8
AV 5	Shift + 9
AV 6	Shift + 0
Audio	Shift + Dual
Dock	Smart
Tuner	Yellow
USB	Shift + AV

Original	Recharge
FM	TV/R
AM	Shift + TV/R
Memory	Rec
Preset+	Shift + Ch +
Preset-	Shift + Ch -
Tuning+	Ch +
Tuning-	Ch -
Info	Info
Movie	Subt
Music	Shift + Subt
Sur. Decode	Dual
Straight	Eject
Sleep	Sleep
Enhancer	Text
Direct	Format
BD/DVD	Red
TV	Green





Original	Rechange	Original	Rechange
 Setup	 Options	 Mode	 Media
 Radio	 3D	 Play	 Play
 Vol+	 Vol +	 <<	 <<
 Vol-	 Vol -	 >>	 >>
 Option	 Shift + Options	 <<	 <<
 Up	 Up	 >>	 >>
 Down	 Down	 1	 1
 Right	 Right	 2	 2
 Left	 Left	 3	 3
 Enter	 Ok	 4	 4
 Return	 Back	 5	 5
 Display	 Shift + Info	 6	 6
 Top Menu	 Menu	 7	 7
 Pop-Up Menu	 D. Menu	 8	 8
 Mute	 Mute	 9	 9
 Stop	 Stop	 0	 0
 Pause	 Pause	 +10	 Guide





 












 
 


Original		Rechange		Original		Rechange	
	Ent		Pre Ch				





Original	Rechange
 Power Source	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Ent	 Pre Ch
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<

Original	Rechange
 >>	 >>
 <<	 <<
 >>	 >>
 Display	 Info

