

 



 


 







 




 

 

 

 

 
 
 

 
 




Original		Recharge		Original		Recharge	
	Power		Power		Band		Smart
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	Tuning Up		Ch +				
	Tuning Down		Ch -				
	No name		Exit				
	Search/Character		TV/R				
	Display		Info				
	Shift/PTY		Options				
	Memory		Media				
	Auto/Manu		Back				

