



 
 










 

 
 

 

 



 
 








Original	Recharge
 Power	 Power
 [i]/Info	 Info
 HDMI Control	 Options
 Sleep	 Sleep
 Screen	 Format
 Source	 AV
 Presets	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back

Original	Recharge
 0	 0
 Menu	 Menu
 Red/Zoom	 Red
 Green/Repeat	 Green
 Yellow/Root	 Yellow
 Blue/Title	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Ok/Selct	 Ok
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 FAV	 Pre Ch
 Lang	 Dual





Original	Rechange
	 Subt
	 Mute
	 Smart
	 Guide
	 D. Menu
	 Text
	 Media
	 Shift + Info
	 Eject
	 TV/R
	 Rec
	 Stop
	 Play
	 Pause
	 <<<
	 >>>
	 I<<<

Original	Rechange
	 >>>

