



Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute
	Netflix		Media		Home		Smart
	Source		AV		P +		Ch +
	1		1		P -		Ch -
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Up		Up
	5		5		Right		Right
	6		6		Down		Down
	7		7		Left		Left
	8		8		OK		Ok
	9		9		Back		Back
	0		0		Exit		Exit
	TV		TV/R		i		Info
	Recall		Pre Ch		Video		Shift + Smart
	V +		Vol +		EPG		Guide
	V -		Vol -		YouTube		Shift + Media





Original		Recharge		Original	Recharge
	Fav 2		Shift + Pre Ch		
	TXT		Text		
	Lang.		Dual		
	Subt.		Subt		
	Aspect		Format		
	<<		<<		
	<<		I<<		
	Pause		Pause		
	>>		>>		
	>>		>>I		
	Red		Rec		
	Play		Play		
	Stop		Stop		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

