

 




 












Original	Rechange	Original	Rechange
 Power	 Power	 0	 0
 Mute	 Mute	 Menu	 Menu
 FAV	 Pre Ch	 Exit	 Exit
 Subtitle	 Subt	 EPG	 Guide
 Info	 Info	 Swap	 Media
 TTX	 Text	 Up	 Up
 List	 List	 Down	 Down
 Recall	 Back	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Pg Up	 Shift + Up
 6	 6	 PG Dn	 Shift + Down
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 >>	 >>





	Original	Rechange	Original	Rechange
	<<	<<		
	>>	>>		
	<<	<<		
	Play	PLAY MODE Play		
	Pause/Timeshift	Pause		
	Stop	Stop		
	Rec	REC MODE Rec		
	Audio	SOUND DUAL Dual		
	M/P	HOME SMART Smart		
	Tv/Radio	SEARCH TV/R TV/R		
	A-B	SETTINGS OPT Options		
	Red/Zoom	A Red		
	Green/Aspect	B Green		
	Yellow/V-Format	C Yellow		
	Blue/Timer	D Blue		

