



 


 








 


 































 


 










 



 










	Original	Recharge		Original	Recharge
	Power		Power		TV/TXT
	Mute		Mute		Menu
	1		1		Update
	2		2		Mix
	3		3		PR+
	4		4		PR-
	5		5		Up
	6		6		Down
	7		7		Right
	8		8		Left
	9		9		Ok
	0		0		Vol+
	-/--		Guide		Vol-
	AV/TV		AV		Red
	Swap		Pre Ch		Green
	16:9		Format		Yellow/Timer
	i		Info		Blue/PP
					Text
					Menu
					Media
					Dual
					Ch +
					Ch -
					Up
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
					Red
					Green
					Yellow
					Blue





Original	Rechange	Original	Rechange
 SUB	 Subt		
 DOUB	 TV/R		
 REV	 3D		
 Stop	 Stop		

