










 
 










 

 


 
 


















 











 



 

 

 








Original	Recharge	Original	Recharge
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/R		TV/R
	Last		Back
	Menu		Menu
	Exit		Exit
	CH+		Ch +
			CH-
			Up
			Down
			Right
			Left
			OK
			Vol+
			Vol-
			PG+
			PG-
			Audio
			Mode
			EPG
			Favor
			Red
			Green
			Yellow
			Ch -
			Up
			Down
			Right
			Left
			Ok
			Vol +
			Vol -
			>>
			<<
			Dual
			Media
			Guide
			Pre Ch
			Red
			Green
			Yellow





	Original		Rechange
	Blue		Blue
	Info		Info
	Sleep		Sleep
	Sub-T		Subt
	Text		Text

	Original		Rechange

