





Original	Recharge
Power	Power
VCR/DVD	Media
DVD Timer	Green
VCR Timer	Red
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/AUX	0
X/Cancel	Exit
Showview/Video Plus+	Guide
Prog/Check	Sleep

Original	Recharge
Display	Info
On Screen/Progressiv	3D
Top	Shift + Menu
Menu	Menu
Set Up	Options
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
I<</Previous	I<<
>>I/Next	>>I
<</Slow-	<<
Play/Select	Play
>>/Slow+	>>
Stop/Clear	Stop





Original		Rechange		Original		Rechange	
	Pause		Pause				
	Rec		Rec				
	Remain/Rec	 + 	Shift + Rec				
	↔		Pre Ch				
	→		Blue				
	Angle/Live Check		AV				
	Subtitle		Subt				
	TV/DVD-TV/VCR		TV/R				
	Mute/Audio		Mute				
	PR+		Ch +				
	PR- TV/CBL/DVD		Ch -				
	Vol+ Tv		Vol +				
	Vol- Tv		Vol -				





 


Original	Rechange	Original	Rechange
Power	Power	Prog/Check	Sleep
VCR/DVD	Media	Display	Info
DVD Timer	Green	On Screen/Progressiv	3D
VCR Timer	Red	Top	Shift + Menu
1	1	Menu	Menu
2	2	Set Up	Options
3	3	Return	Back
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Enter	Ok
9	9	I<</Previous	I<<
0/AUX	0	>>/Next	>>I
X/Cancel	Exit	<</Slow-	<<
Memory/Mark	Smart	Play Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>

Original	Rechange	Original	Rechange
Power	Power	Prog/Check	Sleep
VCR/DVD	Media	Display	Info
DVD Timer	Green	On Screen/Progressiv	3D
VCR Timer	Red	Top	Shift + Menu
1	1	Menu	Menu
2	2	Set Up	Options
3	3	Return	Back
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	Enter	Ok
9	9	I<</Previous	I<<
0/AUX	0	>>/Next	>>I
X/Cancel	Exit	<</Slow-	<<
Memory/Mark	Smart	Play Select	Play
Showview/Video Plus+	Guide	>>/Slow+	>>





Original		Recharge		Original	Recharge
	Stop/Clear		Stop		
	Pause		Pause		
	Rec		Rec		
	Remain/Rec		Shift + Rec		
	↔		Pre Ch		
	→		Blue		
	Angle/Live Check		AV		
	Subtitle		Subt		
	TV/DVD-TV/VCR		TV/R		
	Mute/Audio		Mute		
	PR+		Ch +		
	PR- TV/CBL/DVD		Ch -		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		





Original	Rechange	Original	Rechange
Power	Power	Menu	Menu
VCR/DVD	Media	Up	Up
DVD Timer	Green	Down	Down
VCR Timer	Red	Right	Right
1	1	Left	Left
2	2	Enter	Ok
3	3	I<</Previous	I<<
4	4	>>/Next	>>I
5	5	<</Slow-	<<
6	6	Play/Select	Play
7	7	>>/Slow+	>>
8	8	Stop/Clear	Stop
9	9	Pause	Pause
0/AUX	0	Rec	Rec
Prog/Check	Sleep	Remain/Rec	Shift + Rec
Display	Info	↔	Pre Ch
Top	Shift + Menu	→	Blue

Original	Rechange	Original	Rechange
Power	Power	Menu	Menu
VCR/DVD	Media	Up	Up
DVD Timer	Green	Down	Down
VCR Timer	Red	Right	Right
1	1	Left	Left
2	2	Enter	Ok
3	3	I<</Previous	I<<
4	4	>>/Next	>>I
5	5	<</Slow-	<<
6	6	Play/Select	Play
7	7	>>/Slow+	>>
8	8	Stop/Clear	Stop
9	9	Pause	Pause
0/AUX	0	Rec	Rec
Prog/Check	Sleep	Remain/Rec	Shift + Rec
Display	Info	↔	Pre Ch
Top	Shift + Menu	→	Blue





	Original	Rechange	Original	Rechange
	Angle/Live Check			AV
	Subtitle			Subt
	PR+			Ch +
	PR- TV/CBL/DVD			Ch -
	Vol+ Tv			Vol +
	Vol- Tv			Vol -

