






 




 


 






Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV/ATV	 Shift + AV / Input / RDS
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Rechange
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 MTS	 Shift + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Rec List/D.Setup	 Setup / OPT /
 Rec List/D.Setup	 Smart / List
 CH-	 CH- / Page-
 Rec	 Rec / Rec Mode





Original	Rechange
Open/Close	Eject / Surround
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop/Freeze	Stop / Hold
<<<	<<< / Tune-
Guide	Guide / EPG / -/-
>>>	>>> / Tune+
Aspect	Shift + Picture / Format
I<<<	I<<< / Preset-
Tv/Radio	TV/Radio /
>>>I	>>>I / Preset+
FAV List	Fav / Marker / PC
Zoom/Index	Zoom / Size
Angle/Cancel	Shift + Exit / Cancel / Clear
Angle/Cancel	Info / Angle
Audio/Subpage	Audio / Lang I/II
Subtitle	Subtitle / EQ

Original	Rechange
D.Menu/Reveal	D.Menu / Top
Size/D.Title	Shift + Sound / Title
Size/D.Title	Shift + Zoom /
Goto/Hold	Shift + Stop /
Goto/Hold	Shift + Text /
Text/D.Display	Shift + Display / Media
Text/D.Display	Text / Goto
Red/Prog	Shift + TV/Radio / Program
Red/Prog	Red / Netflix / Search
Green/Step	Shift + Pause / Step /
Green/Step	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Yellow/Repeat	Shift + Green / APP /
Cyan/A-B	Blue / Prime Video / Random
Cyan/A-B	Shift + Yellow / YouTube /

