





 







Original	Recharge
Eject	Eject / Surround
HDD	Shift + 7
DVD	Shift + 2
Power	Power
1	1
2	2
3	3
Prog+	CH+ / Page+
4	4
5	5
6	6
Prog-	CH- / Page-
7	7
8	8
9	9
Input	AV / Input / RDS
Audio	Audio / Lang I/II

Original	Recharge
0	0
Clear	Exit / Cancel / Clear
TV/DVD	TV/Radio /
Subtitle	Subtitle / EQ
Angle	Info / Angle
Play Mode	Shift + Play /
Zoom	Zoom / Size
System Menu	Shift + D.Menu / Top Menu
Title List	Sound / Title
Timer	Sleep / Timer
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Return	Back / Return





Original	Recharge
 Down	 Down
 Display	 Display / Media
 I<<	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I	 >>I / Preset+
 <</<I/<II	 << / Tune-
 Play	 Play / Slow
 >>/I/>II>	 >> / Tune+
 Tv Pause	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Rec Stop	 Shift + Stop /
 DUB/HDD/DVD	 Shift + 3
 Rec Mode	 Shift + Rec / Rec Mode
 Vol+ Tv	 Vol+

Original	Recharge
 Prog+ Tv	 Shift + CH+ /
 Power Tv	 Shift + Power
 Vol- Tv	 Vol-
 Prog- Tv	 Shift + CH- /
 Input Tv	 Shift + AV / Input / RDS

