



Original	Recharge
Eject	Eject / Surround
HDD	Shift + 7
DVD	Shift + 2
Power	Power
1	1
2	2
3	3
Prog+	CH+ / Page+
4	4
5	5
6	6
Prog-	CH- / Page-
7	7
8	8
9	9
Input	AV / Input / RDS
Audio	Audio / Lang I/II

Original	Recharge
0	0
Clear	Exit / Cancel / Clear
TV/DVD	TV/Radio /
Subtitle	Subtitle / EQ
Angle	Info / Angle
Play Mode	Shift + Play /
Zoom	Zoom / Size
System Menu	Shift + D.Menu / Top Menu
Title List	Sound / Title
Timer	Sleep / Timer
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Return	Back / Return





Original	Recharge
Down	Down
Display	Display / Media
I<<	I<< / Preset-
←	Shift + Left
→	Shift + Right
>>I	>>I / Preset+
<</<I/<II	<< / Tune-
Play	Play / Slow
>>/I>/II>	>> / Tune+
Tv Pause	Shift + Pause / Step /
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Rec Stop	Shift + Stop /
DUB/HDD/DVD	Shift + 3
Rec Mode	Shift + Rec / Rec Mode
Vol+ Tv	Vol+

Original	Recharge
Prog+ Tv	Shift + CH+ /
Power Tv	Shift + Power
Vol- Tv	Vol-
Prog- Tv	Shift + CH- /
Input Tv	Shift + AV / Input / RDS

