




 
 
 
 
 




	Original	Rechange	Original	Rechange
	Power			>>I
	Source			<<
	Open/Close			>>
	Sleep			Stop
	1			Play
	2			Pause
	3			Vol +
	4			Vol -
	5			Mute
	6			Repeat
	7			Tuning+
	8			Tuning-
	9			Disc Menu
	0			Menu
	Dolby PL			Title Menu
	DSP/EQ			Tools
	I<<			Info
				>>I
				<<
				>>
				Stop
				Play
				Pause
				Vol +
				Vol -
				Mute
				Text
				Ch +
				Ch -
				D. Menu
				Menu
				TV/R
				Options
				Info





 
 



 

 
 
 
 






















 



Original		Rechange		Original		Rechange	
	Return		Back				
	Exit		Exit				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Red		Red				
	Green/Tuner		Green				
	Yellow/MO/ST		Yellow				
	Blue/CD Ripping		Blue				
	Dimmer		Subt				
	S.Vol		Format				
	P.Bass/Audio Upscale		3D				





Original	Rechange
 Power	 Power
 Function Tv	 AV
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play

Original	Rechange
 Pause	 Pause
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red



