

 
 


 

 
















 

 
 

 







Original	Rechange
 Power	 Power
 Energy Saving	 3D
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 Still	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Rechange
 Blank	 Subt
 Ratio	 Smart
 Mute	 Mute
 Page Up	 Ch +
 Page Down	 Ch -
 Settings	 Options
 Picture	 Format
 Q.Menu	 D. Menu
 Back	 Back
 AV Mode	 TV/R
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Stop	 Stop





Original	Rechange	Original	Rechange
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Simplink	 Media		
 Key's Up	 >>I		
 Key's Down	 I<<		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Original	Rechange

