


 




 




 
 






 







 


 




 

 




Original		Recharge	
	Power		Power
	Func		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Sound Effect		Dual
	Optical		Options
	III		Smart
	Repeat		Text
	>>I		>>I
	I<<		I<<
	Play		Play
	Pause		Pause
	Info		Info
	DRC		Media
	Night		Subt
	Auto Vol		Back

Original		Recharge	
	AV Sync		AV
	Sleep		Sleep
	Auto Power		Exit

