



Original		Rechange		Original		Rechange	
	1		1		TOP MENU / RDS DISPLAY		D.Menu / Top
	2		2		LEFT / I<< / P. CALL -		Left
	3		3		MULTI CONTROL		Up
	POWER		Power		RIGHT / >>I / P. CALL +		Right
	4		4		MULTI CONTROL		Down
	5		5		<< TUNING		<< / Tune-
	6		6		TUNING >>		>> / Tune+
	7		7		ENTER / Play reverse		OK
	8		8		BAND / PLAY /		Play / Slow
	9		9		BASS BOOST		Audio / Lang I/II
	0		0		A/B+100 / DISC		Yellow / YouTube / Repeat
	+10		Guide / EPG / -/--		+100 / DISC SKIP / A/B		Fav / Marker / PC
	LOUDNESS / PAGE DOWN		Shift + Vol-		AUTO / STOP		Stop / Hold
	RECEIVER PTY / PAGE UP		Shift + Vol+		DVD / DVD		Pause / Step / Freeze
	MENU / SET UP		Menu / Home		AUX / DVD I<<		Shift + Left
	OSD / SOUND		Shift + Sound / Title		CD/DVD / DVD		Shift + Right
	RETURN / LISTEN MODE		Back / Return		TUNER / DISC		Shift + 6





Original	Recharge	Original	Recharge
 MD/TAPE	 Shift + 5		
 DVD SKIP PREV.	 I<< / Preset-		
 VIDEO1	 Shift + 1		
 DVD SKIP NEXT	 Exit / Cancel / Clear		
 VIDEO2	 Shift + 2		
 CINEMA EQ	 Red / Netflix / Search		
 TONE	 Sound / Title		
 MUTE	 Mute / Dimmer		
 VOLUME-	 Vol-		
 VOLUME+	 Vol+		

