



Original	Recharge
Power	Power
Power Tv	+ Shift + Power
Tv/PVR	TV/Radio /
Vol-	Vol-
Vol+	Vol+
Av Input Tv	AV / Input / RDS
1	1
2	2
3	3
PR/CH+ Tv	+ Shift + CH+ /
4	4
5	5
6	6
PR/CH- Tv	+ Shift + CH- /
7	7
8	8
9	9

Original	Recharge
Vol+ Tv	+ Shift + Vol+
Rec	Rec / Rec Mode
0	0
Timeshift	Setup / OPT /
Vol- Tv	+ Shift + Vol-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Guide	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK



