

 

 


 
 

 


 


 
 



 

 



 
 


 

 
 
 
 
 
 

 
 


 


 



 

 




 


 

 




 
 








 

 

 





 





 




Original	Rechange	Original	Rechange
 Power	 Power	 Lang / NICAM	 Dual
 Mute	 Mute	 Input	 AV
 1	 1	 CH +	 Ch +
 2	 2	 CH -	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Menu	 Menu
 9	 9	 Exit	 Exit
 0	 0	 Display	 Info
 List	 List	 P.Mode	 Shift + Format
 Previous Channel	 Back	 S.Mode	 Shift + Dual
 Vol +	 Vol +	 Sleep	 Sleep
 Vol -	 Vol -	 FAV	 Pre Ch
 Aspect	 Format	 FAV -	 Shift + Ch -





Original	Rechange
 FAV +	 Shift + Ch +
 EPG	 Guide
 Text	 Text
 Hold	 3D
 TV / Radio	 TV/R
 Subtitle	 Subt
 Index / <<<	 <<<
 Size / >>>	 >>>
 Recall	 I<<<
 Subpage / >>>I	 >>>I
 Rec	 Rec
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 Media	 Media
 Red	 Red
 Green	 Green

Original	Rechange
 Yellow	 Yellow
 Blue	 Blue

