




 


 


 









 





 



 











 





 

 



 



 












Original		Rechange		Original		Rechange	
	Power		Power		Right		Right
	1		1		Left		Left
	2		2		OK		Ok
	3		3		PR+		Ch +
	4		4		PR-		Ch -
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Menu		Menu
	8		8		TV		TV/R
	9		9		Video		AV
	0		0		L/?		Guide
	Red/M		Red		L/?		Dual
	Green		Green		PC		Pre Ch
	Yellow		Yellow		Text		Text
	Blue		Blue		F[+]		3D
	Up		Up		Hold/Freeze		Format
	Down		Down		M/S		Options





Original		Rechange		Original		Rechange	
	Mute		Mute				
	PIP		Media				
	Auto/Page		Smart				
	i		Info				
	Timer/Mix		Subt				
	F1		Shift + 1				
	F2		Shift + 2				
	F3		Shift + 3				
	F4		Shift + 4				

