







 
















 

 

 







 










 










 












Original	Recharge
 On/Standby	 Power
 Select Disc 1	 Shift + 1
 Clear/Dimmer	 Exit / Cancel / Clear
 Memory	 Fav / Marker / PC
 Select Disc 2	 Shift + 2
 Random CD	 Blue / Prime Video / Random
 Pause CD	 Pause / Step / Freeze
 CD	 Yellow / YouTube / Repeat
 Select Disc 3	 Shift + 3
 Stop CD	 Stop / Hold
 Play CD	 Play / Slow
 Tuner (Band)	 TV/Radio /
 Select Disc 4	 Shift + 4
 Rec USB	 Rec / Rec Mode
 Pause USB	 Shift + Pause / Step /
 Select Disc 5	 Shift + 5
 Stop USB	 Shift + Stop /

Hold

Original	Recharge
 Play USB	 Shift + Play /
 Video/AUX/USB	 Red / Netflix / Search
 I<</<</Preset Down/Tuning/Curs	 I<</Preset-
 Tuning/Cursor Up	 CH+ / Page+
 Tuning/Cursor Right/Preset	 >>I / Preset+
 Tuning/Cursor	 CH- / Page-
 Mode	 Picture / Format
 Enter	 OK
 Display	 Display / Media
 Folder	 D.Menu / Top
 Clock/Timer	 Sleep / Timer
 RDS ASPM	 Setup / OPT /
 RDS PTY	 Smart / List
 RDS Display	 Shift + Display / Media
 1	 1
 2	 2
 3	 3





	Original	Rechange
	4	VIDEO 4
	5	TAPE 5
	6	TUNER 6
	7	AUX - HDD 7
	8	USB 8
	9	BLUETOOTH 9
	0	HDMI - SAT 0
	+10	GUIDE EPG Guide / EPG / -/-
	Equalizer Mode	LANG I/II Audio / Lang I/II
	X.Bass/Demo	TITLE Sound / Title
	Vol-	Vol-
	Vol+	Vol+

	Original	Rechange

