



Original	Recharge
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
On/Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/--
Clear/Del	Exit / Cancel / Clear
Prog/Direct	TV/Radio /
Random	Blue / Prime Video / Random

Original	Recharge
Repeat	Green / APP / Repeat
Source	AV / Input / RDS
<</Tu-	<< / Tune-
Tu+/>>	>> / Tune+
Tuner	Shift + 6
I<</CH-	I<< / Preset-
CH+/>>I	>>I / Preset+
Play/Pause CD	Play / Slow
Stop	Stop / Hold
Play/Pause USB	Shift + Play /
Vol+	Vol+
SDB/Tone	Sound / Title
Vol-	Vol-
Mute	Mute / Dimmer
Folder Mode	Picture / Format
Menu/Set	Menu / Home
Up	Up





Original	Recharge	Original	Recharge
 Play/Pause iPod	 Pause / Step / Freeze		
 DAB/RDS	 Zoom / Size		
 Left	 Left		
 Enter/Memo	 OK		
 Right	 Right		
 Time/Display	 Display / Media		
 Clock	 Shift + Sleep / Timer		
 Down	 Down		
 Remote/Browse	 Info / Angle		

