





 










Original		Rechange		Original		Rechange	
	Standby		Power		Menu		Menu
	Mute		Mute		EPG		Guide
	1		1		Exit		Exit
	2		2		CH+		Ch +
	3		3		CH-		Ch -
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		OK		Ok
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	FAV		Pre Ch		Text		Text
	Audio		Dual		Red		Red
	Recall		Back		Green		Green
	Subtitle		Subt		Yellow		Yellow
	Info		Info		Blue		Blue





	Original	Recharge	Original	Recharge
 Rec List	 List			
 Tv/Radio	 TV/R			
 Stop	 Stop			
 Pause	 Pause			
 <<	 <<			
 >>	 >>			
 Record	 Rec			

