




 
 

 
 
 





 
 



 


 
 


 
 


 
 
 
 

 

 
 
 
 
 

 



 

 
 
 

 
 




 
 

 

 





Original	Recharge	Original	Recharge
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back









 

 
 
 





 
 



 


 
 


 
 

 
 
 
 
 

 

 
 
 
 
 

 





 
 
 

 
 
 



 
 

 

 
 


Original	Recharge	Original	Recharge
GOTO	ECO 3D		3D
<<<	<<<		<<<
>>>	>>>		>>>
<<<	<<<		<<<
>>>	>>>		>>>
Play	PLAY MODE		Play
Pause	Pause		Pause
Stop	Stop		Stop
RPT	APP MEDIA		Media
Red	A		Red
Green	B		Green
Yellow	C		Yellow
Blue	D		Blue

Original	Recharge





Original		Rechange		Original		Rechange	
	Standby		Power		Down		Down
	PVR Rec		Rec		Right		Right
	PVR List		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Smart		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Tv/Radio		TV/R		7		7
	Favourite		Pre Ch		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back





Original		Recharge		Original		Recharge	
	Goto		3D				
	<<		<<				
	>>		>>				
	1<<		1<<				
	>>1		>>1				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	RPT		Media				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

