



| Original  | Rechange  |
|---|---|
|    |  Mute / Dimmer     |
|    |  Fav / Marker / PC |
|    |  Power             |
|    |  Info / Angle      |
|    |  Smart / List      |
|    |  1                 |
|    |  2                 |
|    |  3                 |
|    |  Stop / Hold       |
|    |  4                 |
|    |  5                 |
|    |  6                 |
|    |  Subtitle / EQ     |
|  |  7               |
|  |  8               |
|  |  9               |
|  |  Display / Media |

| Original  | Rechange   |
|---|--|
|    |  AV / Input / RDS   |
|    |  0                  |
|    |  Guide / EPG / -/-- |
|    |  Shift + Text /     |
|    |  Text / Goto        |
|    |  CH+ / Page+        |
|    |  Up                 |
|    |  Menu / Home        |
|    |  Left               |
|    |  Vol-               |
|    |  OK                 |
|    |  Right              |
|    |  Vol+               |
|  |  Back / Return    |
|  |  CH- / Page-      |
|  |  Down             |
|  |  Setup / OPT /    |



